



YOURCE cool | 5.3 L
Water Dispenser for Home




QUICK START
GUIDE



This guide gets you started, but the manual has the full story – don't forget to hang on to it!



Step 1: How to set up the water filter

Clean the water tank and funnel, activate the MAXTRA PRO and fill it with water twice before use. Plug in the power and turn on using the switch at the back to start using the device.

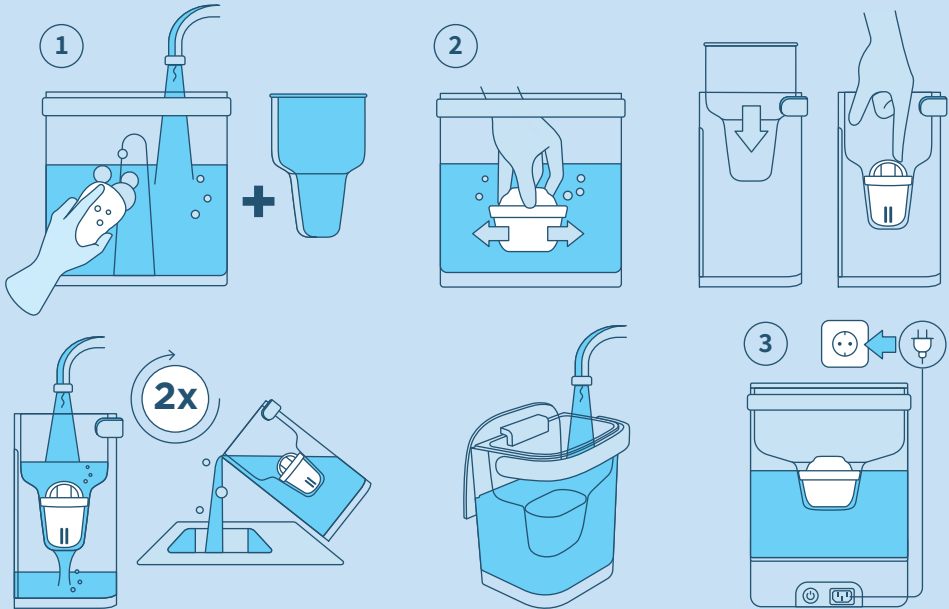

Step 2: How to use the panel

Preset temperature settings

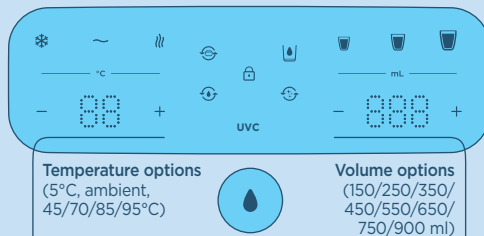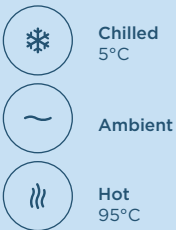

Preset volume settings



2' **Child lock**
Press the button for 2 seconds to unlock.

Water dispensing
Press the button to start dispensing, button lights up in different colours to show the selected temperature (Blue: chilled; White: ambient/45°C; Red: 70/85/95°C).

Cold water symbol
Flashes when cooling is in progress, lights up when cold water is ready to dispense.

Empty tank indicator
Fill-up the water tank, when it lights up.

Filter exchange indicator
Red light: used 21 days/112 L
Flashing red light: used 28 days/ 150 L → exchange water filter.
After the filter change press for 3 seconds to reset.

UV-C Indicator
Flashes slowly when the UV-C LED is active

Step 3: How to initiate automatic and manual cleaning



Automatic self-cleaning (before 1st use, after 90 days and after switching off/unplugging the appliance)

When both symbols flash red:

- 1) Place a large heat-resistant container (>2.75 L) under the nozzle.
- 2) Press and hold both buttons for 3 seconds to start cleaning.
- 3) First, inner tubes will be flushed, followed by the flushing of cold water tank.

Cleaning uses approx. 2.75 L of water. Ensure enough water is in the tank and a large enough container is used.



Manual deactivation of automatic self-cleaning

If device was switched off or unplugged for a short period of time, you can skip the automatic self-cleaning. When cleaning symbols are flashing red, press the '+' and '-' volume button at the same time.

Note: BRITA strongly recommends to carry out the automatic self-cleaning process if device was switched off/unplugged for more than 24 hours!



Inner tube flushing (after 24h of non-use of ambient and hot water)

When symbol flashes red, temperature and volume will be automatically set to 95°C and 350 ml. Press and hold the symbol for 3 seconds to start the flushing and discard the first cup of dispensed water.



Manual de-activation of inner tube flushing

For hygiene, the inner tube flushing symbol starts flashing red if the device has not been used for 24 hours. If you want to skip the flushing, just dispense water at ambient or hot temperature and in the desired volume, and the flushing indicator will then turn off.



Cold water tank flushing (after 7 days of non-use of cold water or after turning cooling system on)

When symbol flashes red:

- 1) Place a large container (>2L) under the nozzle.
- 2) Make sure the tank contains at least 1 L of water.
- 3) Press and hold symbol for 3 seconds to start flushing.



Manual activation of self-cleaning

- 1) Place a large container (>2.75 L) under the nozzle.
- 2) Press the temperature '+' button for 3 seconds, the inner tube flushing and the cold water tank flushing symbol will start flashing.
- 3) Press both buttons for 3 seconds to start the self-cleaning program.

Step 4: How to set up additional functions (optional)



Turn on/off cooling system

If the cooling function is not used for a long time, we recommend to turn off the cooling system.



- 1) Place a sufficiently large container under the nozzle (1 L).
- 2) Press and hold the cold water and temperature '-' buttons for 3 seconds.



- 3) Dispensing button will start flashing blue - press the dispensing button to empty the cold water tank inside.



If the cooling system was turned off for longer than 24 hours, the cold water tank flushing symbol will start flashing. To activate it, see Step 3.



To turn cooling system on again, press and hold the preset button 'hot' and temperature '+' button for 3 seconds.



Cold water temperature pre-setting

To switch from 5°C to 10°C press the cold water button and the volume '-' button for 3 seconds,




then change the temperature by pressing the temperature '+' or '-' button.






To confirm the temperature press the cold water button and the volume '-' button for 3 seconds.




Continuation Step 4: How to set up additional functions (optional)

3'  **Set a timer to turn the cooling system off/on**


  To enter the Time-Setting mode press the cold water button and the temperature '+' button for 3 seconds.

3'  **Sound setting**


To adjust the sound level press the volume '+' button for 3 seconds to enter sound level adjustment mode. When the button is flashing, press the volume '+' button again to select between mute, low or high volume. The setting will be saved automatically after 10 seconds.


 **Select turn-off time**


Calculate the number of hours from the current time until the cooling system should turn off and use the temperature '-' or '+' buttons to select the desired hours.

 **Select turn-on time**

Press the volume '-' or '+' buttons to select 'on' mode.

 Enter the hours from the current time when you want the cooling system to turn on by using the temperature '-' or '+' buttons.



 **Save settings**

Press the water dispensing button to save your settings.

Step 5: How to make your YOURCE cool holiday ready

Manually emptying the cold water tank

The cold water tank must be emptied when the device is switched off for more than 24 hours. Empty the water tank and take out the water filter.

Place a container holding at least 1 litre under the nozzle. Empty the cold water tank by pressing the dispensing button for 10 seconds.

Unplug the appliance.

Discover BRITA

www.welcome.brita.net



Product Tips



Chance to win



Discounts

Product
Registration



CUC2512